

T6K-V3S Software update manual

Your Futaba T6K-V3S transmitter programming can be updated easily online. When functions are added or improved, the update file can be downloaded from our website.

For more information, check out web site for FAQ regarding updating this product.


*The display screen is an example. The screen depends on the PC. T6K-V3S screens are subject to change without notice.

Required for update (Purchase separately)

CIU-3 or CIU-2 (optional)




DSC cord
(for updates of 4PV optional)
or
CGY750/GY701/GY520
Extensions (optional)

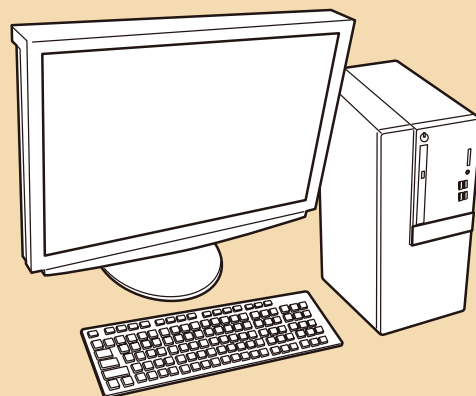

PC
(Access is possible by the web)

Preparations

1. Install the driver for the CIU-3/CIU-2 onto your PC.

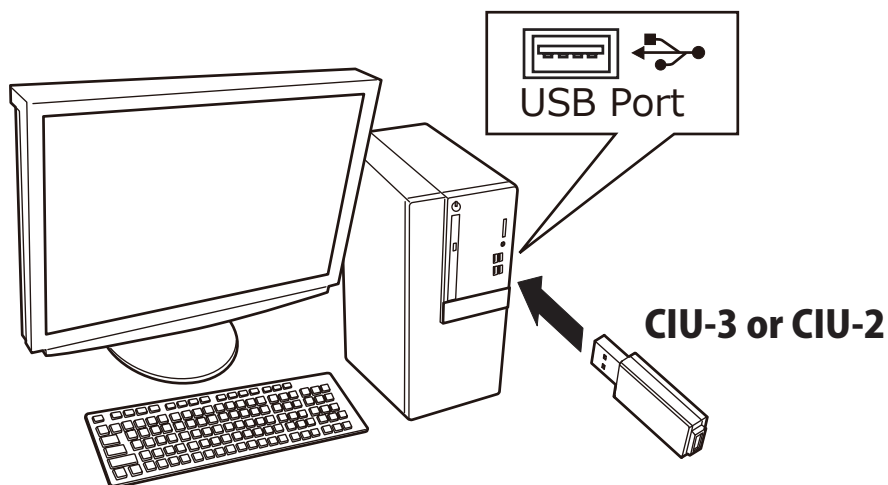


- ◆ When the **CIU-3** is first connected to the PC, once the CIU-3 is connected to the PC, download the recommended driver software Using Windows Vista, the "Found New Hardware Wizard" window appears on the screen. Click "Locate and install driver software".
- ◆ When the **CIU-2** is first connected to the PC; the "Found New Hardware Wizard" window appears on the screen. Install the drivers download from local Futaba Dealers Website.
- ◆ Refer to the manual of the CIU-3/CIU-2 for further information.

Updating procedure


Note: If the battery fully discharges during program updating, updating will fail. When the remaining battery capacity is 50% or less, always recharge the battery before updating.

1. Download the zip file of the update data from our website or your local distributor's website.


<http://www.rc.futaba.co.jp>

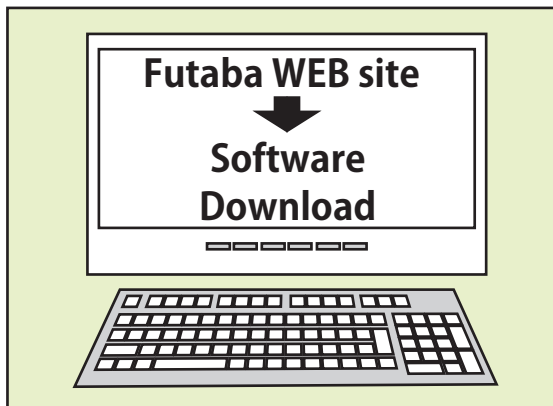

2. Extract the zip file on your computer.

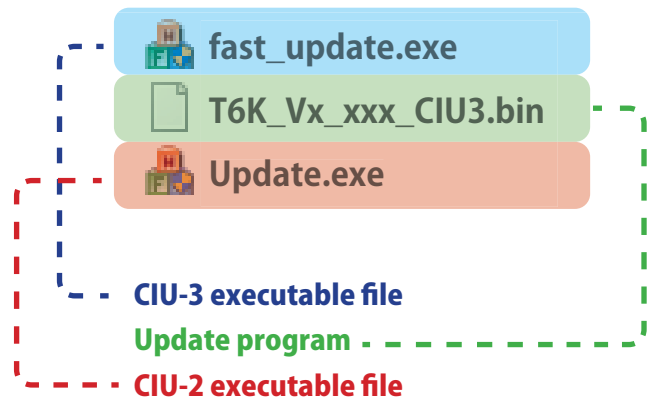


3. Connect as shown in the figure.

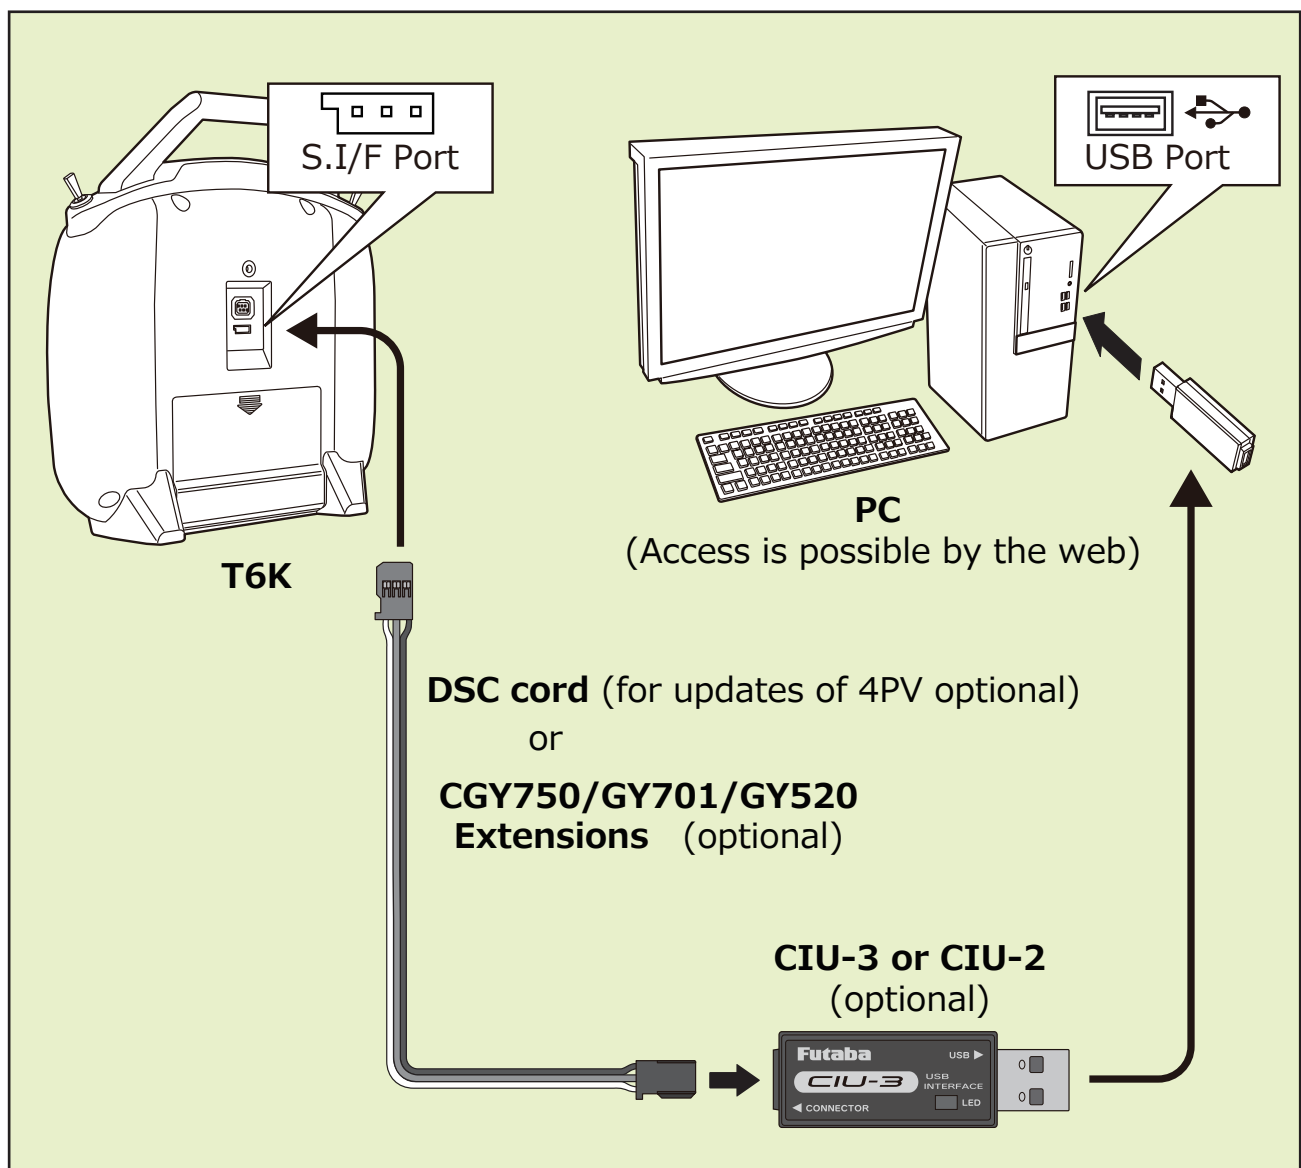

T6K-V3S

4. CIU-3; Turn on the transmitter power while pressing down the "END" and "+" button.

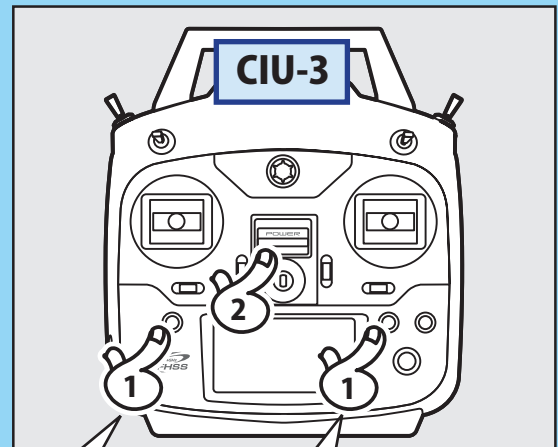


Press the END and ⊕ button next turn ON

CIU-3

READY (FACTORY3)

4. CIU-2; Turn on the transmitter power while pressing down the "END" button.

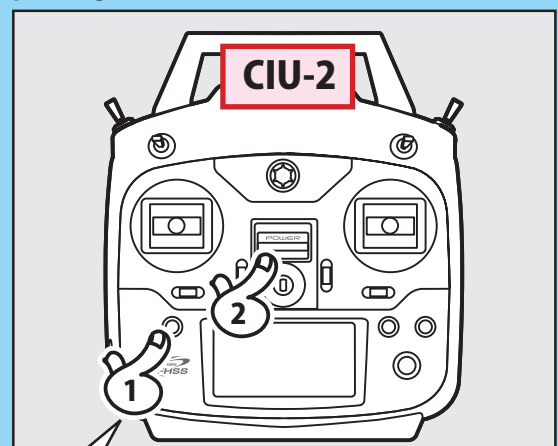


Press the END button next turn ON

CIU-2


UPDATE READY

PC


5. Start an executable file by a PC.

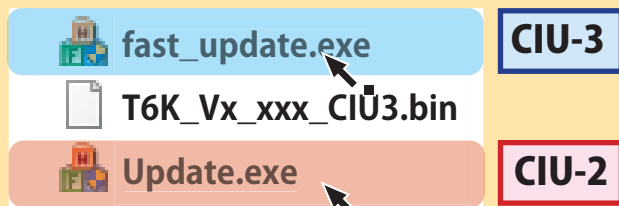


Double-click

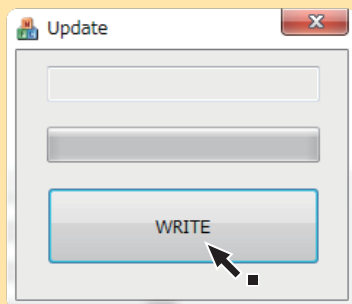

Write

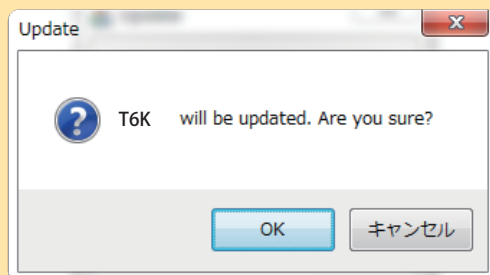

OK

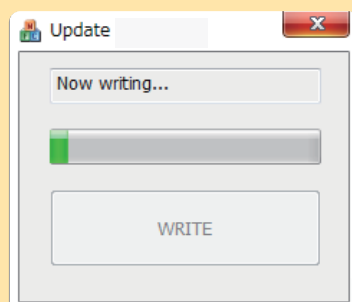

T6K-V3S

CIU-3

READY (FACTORY3)

CIU-2


UPDATE READY

NOW WRITING...

Wait for about 30 seconds - 3 minutes.


Don't turn off the power !

PC

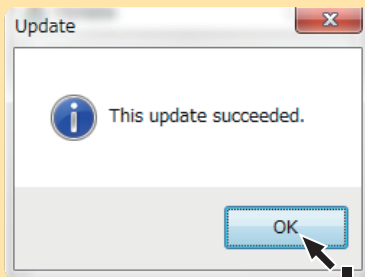

Shut down the update software.


T6K-V3S

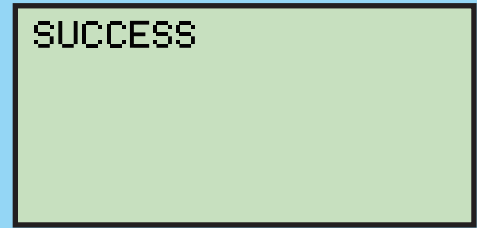


Completed

6. Turn off the power switch of your T6K-V3S and remove the CIU-3/CIU-2.

 7. Check the software version at [TX SETTING].



Turn off the power and then turn on the power while pressing the **+** key and **-** key simultaneously. (Setting is ended by power off.)

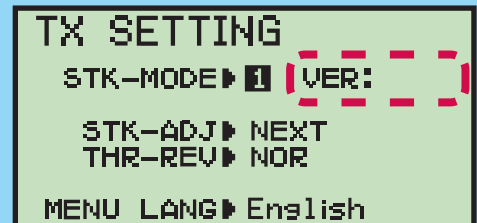


8. Be sure to check the each function before use.

Error

1. If an error display appeared, the redo an update from the beginning.

PC

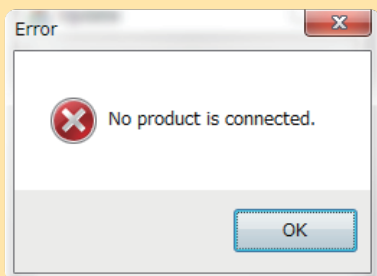

T6K-V3S

UPDATE
TYPE MISMATCH



Don't disconnect or remove the battery from the transmitter during the update.

It is possible that the transmitter can be damaged if the battery is unplugged during the update.

In the case of a failed update, the transmitter may not restart. In this situation, try the following steps to retry the updating procedure:

1. Detach the battery from the transmitter.
2. Attach the battery to the transmitter while pressing down the "END" button.
3. The update will start.

Even after the above steps, if the transmitter fails to update or does not start, please have it serviced.

T6K-V3S SOFTWARE UPDATE CHANGES (Version:1.03)

Fixed an issue where the timer would repeatedly reset when using the timer reset switch.

(Version:1.02)

Fixed a bug that the gyro function does not work when throttle cut is enabled.